

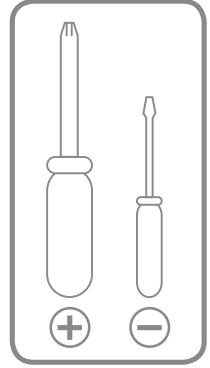
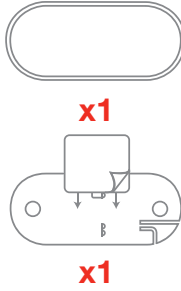
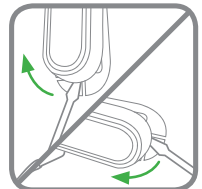
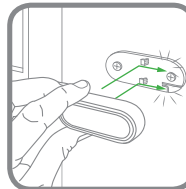
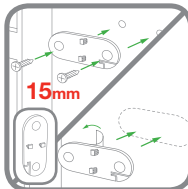
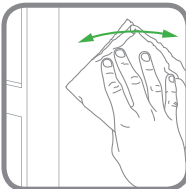
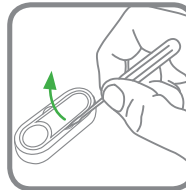
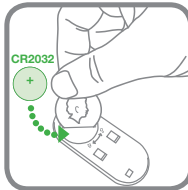
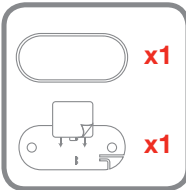
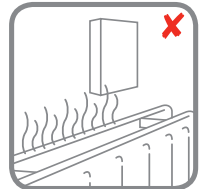


DC311XXP2/BS
DC313XXP2/BS


Contents **DE** Inhalt **FR** Contenu **UK** Inhoud **FI** Sisältö
UK Inhold **IT** Contenuto **ES** Contenido **PT** Conteúdo
GR Περιεχόμενα **SE** Innehåll

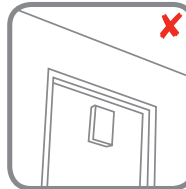


Getting started **DE** Erste Schritte **FR** Démarrage **UK** Aan de slag **FI** Aloitusopas **UK** Kom i gang
IT Operazioni preliminari **ES** Para empezar **PT** Para começar **GR** Πρώτα βήματα **SE** Kom igång

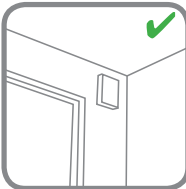




- GB Optional features DE Optionale Funktionen
- FR Options disponibles IT Opzioni FI Valinnaiset ominaisuudet
- OK Valgírnie funktjónir IT Funzionalità opzionali
- ES Opciones disponibles TR Fonksiyonlar opsiyonel
- PT Προαιρετικές λειτουργίες πρόσθετων SE Möjliga funktioner

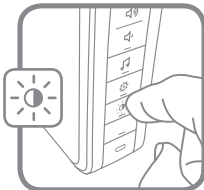

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

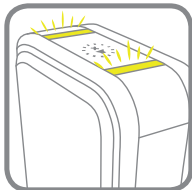

- GB Linking DE Einlernen FR Programmation
- NL Verknüpfung FI Linkittämisen OK Forbinde
- IT Collegamento ES Enlace
- PT Programação GR Ουδέσση SE Länkning

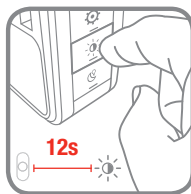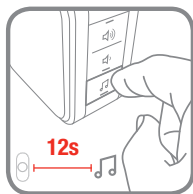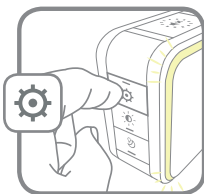

- GB Trouble shooting DE Fehlerbehebung FR Dépannage NL Probleemoplossing
- FI Vianmääritys OK Problemlösning IT Risoluzione dei problemi ES Solución de problemas
- PT Resolução de problemas GR Αντιμετώπιση προβλημάτων SE Felsökning

livewell.honeywell.com

