

---

***Spare parts list***

<b>Position</b>	<b>Description</b>	<b>No.</b>
12	Keyless chuck	406190
3	Switch	406189
4	Battery	CDA1004
005 till 011 + 014 till 028	Gearbox assembled	406113
33	Left/right button	406112
34	Charger	406179
35	Battery holder	406178

---

**Exploded view**

