
Spare parts list

No.	Description	No.
12	Keyless chuck	406190
3	Switch	406189
4	Battery	CDA1006
005 till 011 + 014 till 028	Gearbox assembled	406113
33	Left/right button	406112
34	Charger	406183
35	Battery holder	406178

Exploded view

