

---

**Spare parts list**

<b>No.</b>	<b>Description</b>	<b>No.</b>
409400	Carbon brush holder	2
409401	Carbon brush set (2 pcs)	3
409402	Carbon brush cap	4
409449	Body	5
409403	Stator	6
409446	Collar	7
800607	Bearing 607 ZZ	10
409404	Rotor	11
409405	Self-locking plate	12
409406	Return spring	13
806000	Bearing 6000 ZZ	14
806001	Bearing 6001 zz	22
409407	Shaft	24
409408	Socket head screw	27
409409	Outer flange	28
409410	Inner flange	30
409445	Washer	32
409447	Wedge	37
409417	Base	42
409412	Chech screw	44
409413	Nut	45
409414	Switch + capacitor	050 + 051
409415	Spanner	57
409419	Guide	-

---

**Exploded view**

