
Spare parts list

No.	Description	No.
406765	Stator	1
406715	Bearing	2
406396	Carbon brush set (2 pcs)	6
406764	Rotor	7
406358	Housing complete	008+021
406364	Bearing	009+010
806001	Bearing 6001 zz	12
406151	PVC Foot	13
406782	Paper clamp	14
406763	Sanding pad	16
407802	Switch	20

Exploded view

