
Spare parts list

No.	Description	No.
001	Adjustable bottom plate	408561
002	Guard plate	408562
003	Rubber sleeve	408563
007	Blade holder	408564
014	Reciprocating bar	408565
015	Sliding bearing	408566
019	Adjusting speed plate	408567
021	Gasket	408568
024	Roller bearing	408569
027	Roller shaft	408570
028	Gear wheel	408571
029	Washer	408572
030	Centre column	408573
032	Carbon brush set	408574
033	Carbon brush holder	408575
037	Switch	408576
052	Rotor	408577
057	Stator	408578
058	Bearing 6000 ZZ	806000
059	Bearing 608 ZZ	800608
-	Set of bolts for saw blade	408592

Exploded view

