
Spare parts list

Position	Description	No.
01	Flange inside	406940
03	Flange outside	406941
04	Wheel cover	406942
18	Spindle gear	406943
28	Pinion gear	406944
32	Rotor	406945
35	Stator	406946
42	Brush holder	406947
43	Carbon brush set (2 pcs)	406948
44	Brush cap	406949
51	Switch	406950
59	Side handle	406877
60	Spanner	406814

Exploded view

