
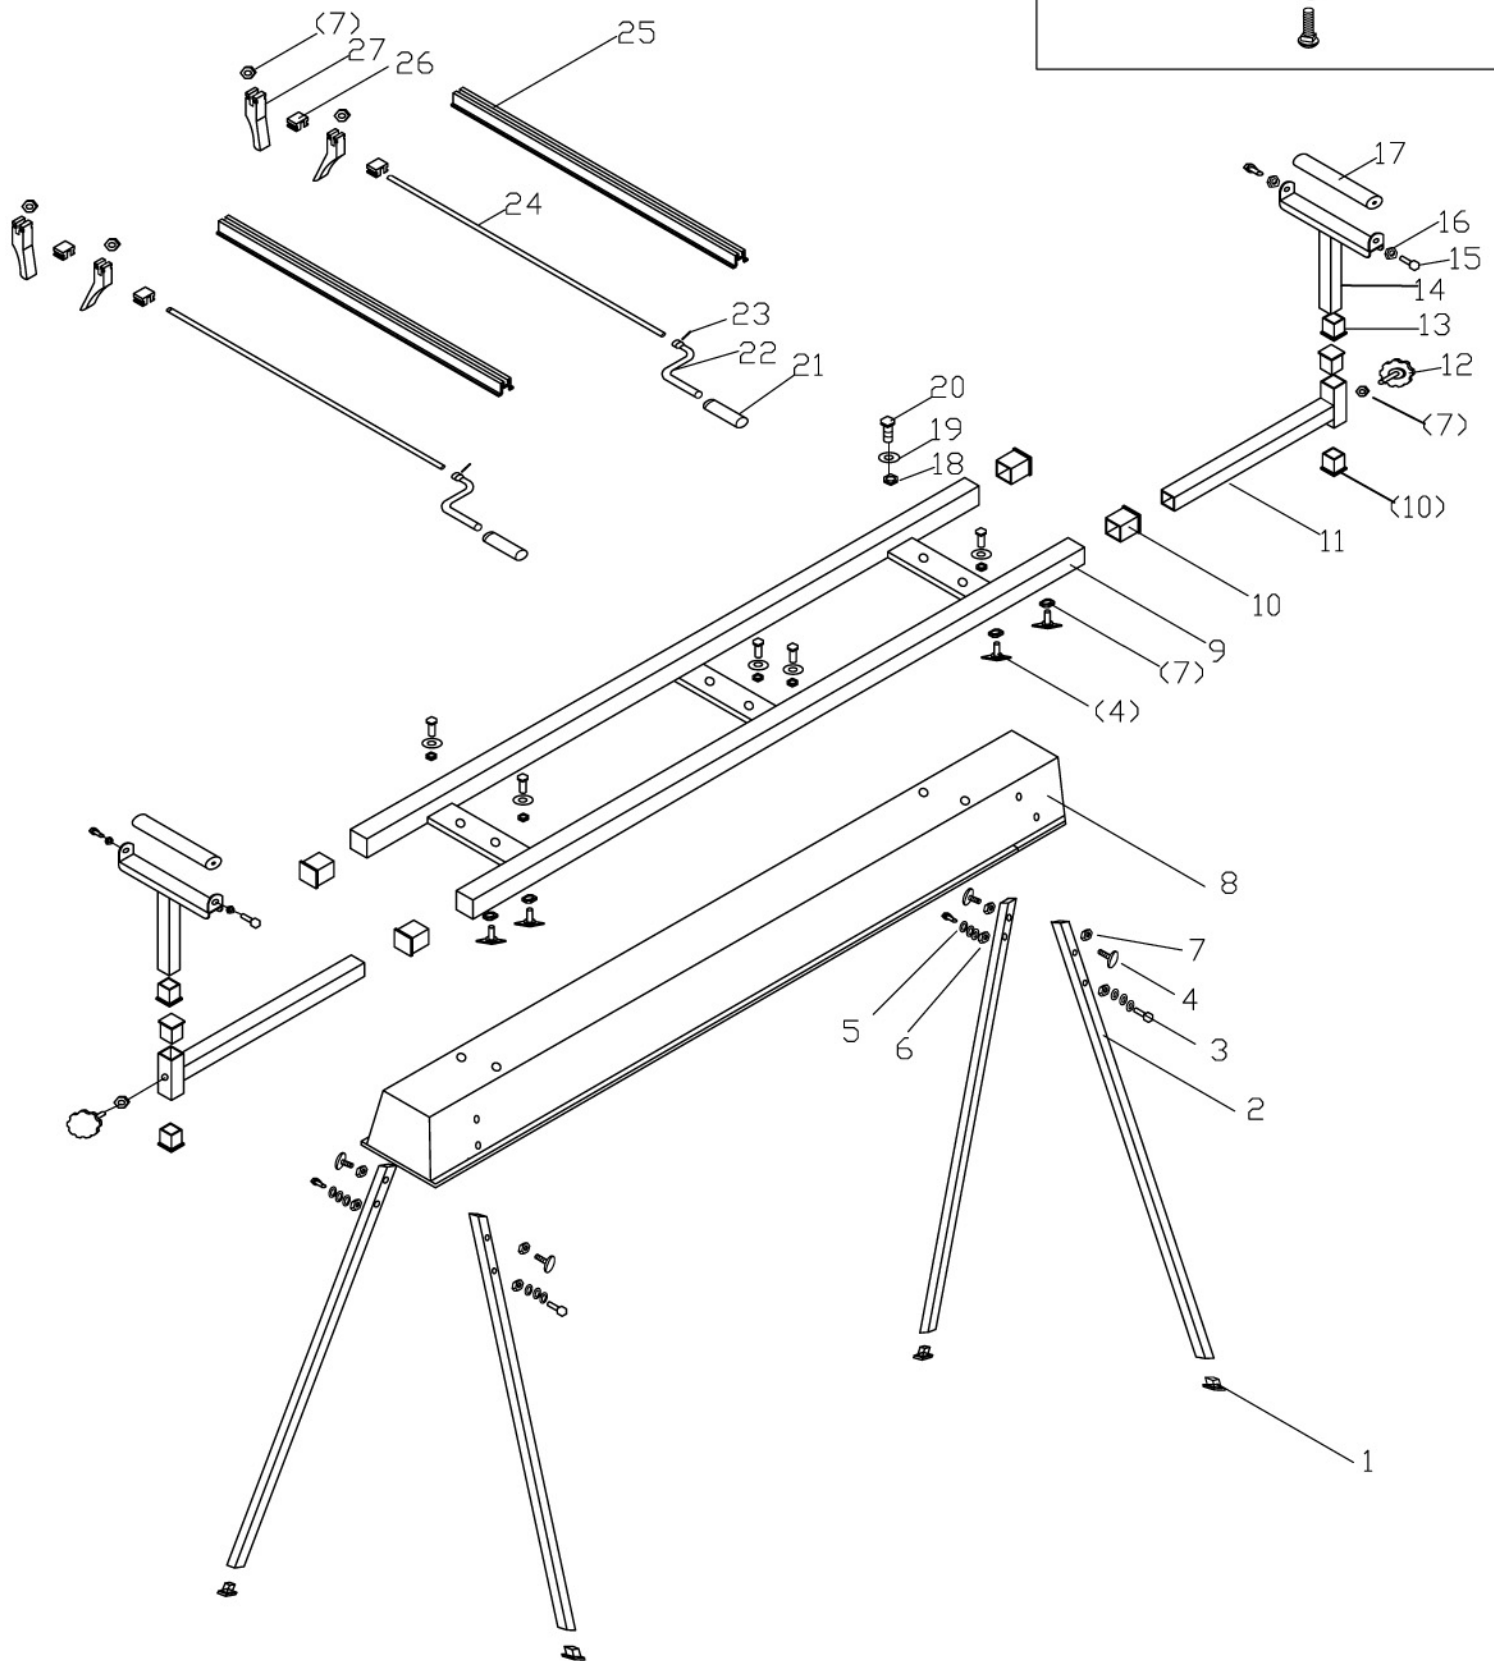


# Exploded view for 40-180

## Accessories:

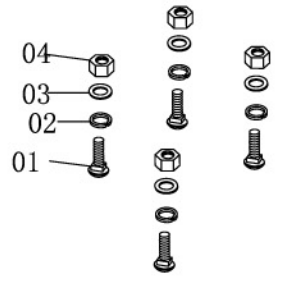

## Spare parts list for 40-180

No.	Description	No.	Description	
1	rubber foot	19	φ 6 pad	
2	legs	20	M6x18 screw	
3	M8x48 screw	21	clamp assembly	
4	M8x20 wing screw	22		
5	φ 8 pad	23		
6	M8 locknut	24		
7	M8 nut	25		
8	frame	26		
9	bracket	27		
10	bushe (一)	Accessories		
11	telescopic bar	01		M6x35 screw
12	locking handwheel	02	φ 6 spring pad	
13	bushe (二)	03	φ 6 flat pad	
14	bracket-roller wheel	04	M6 nut	
15	nonstandard screw			
16	M8 nut			
17	bracket wheel			
18	M8 locknut			