


Exploded view for 40-190

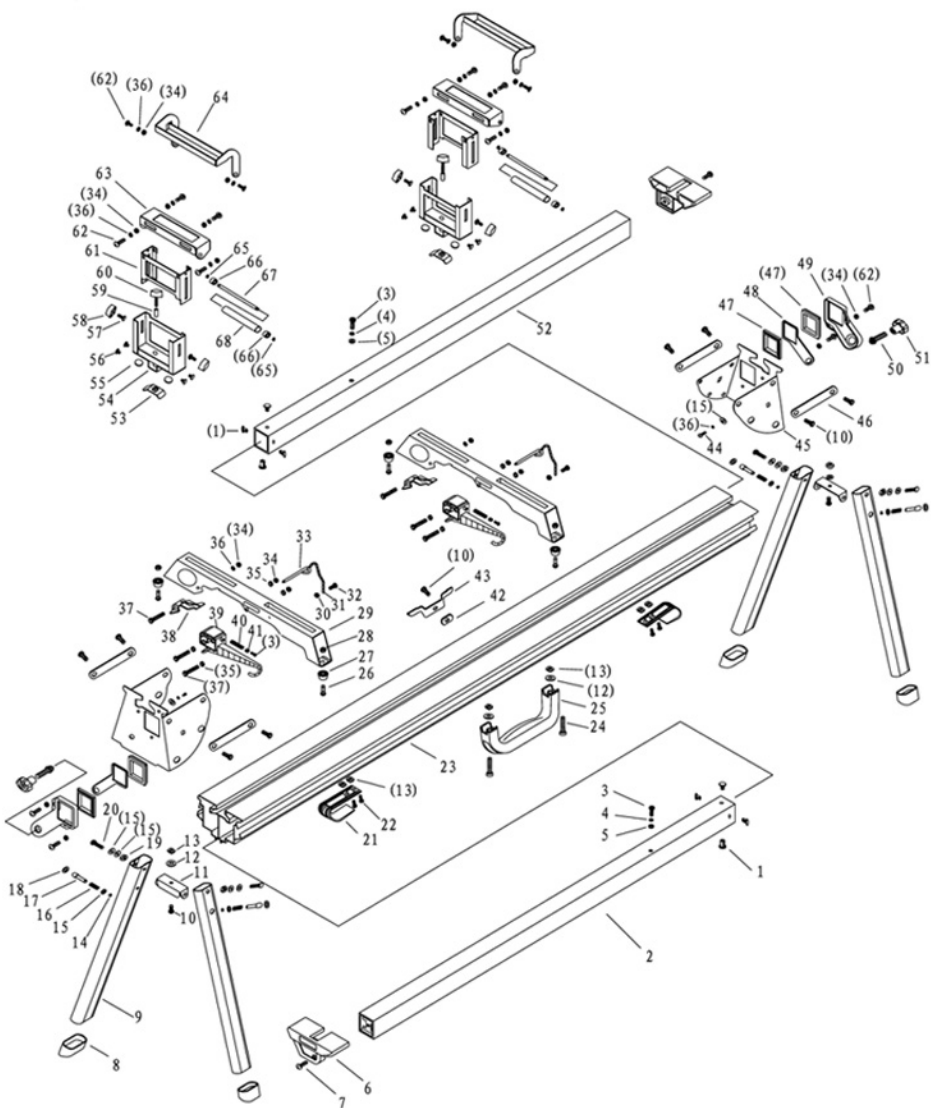

## Spare parts list for 40-190

No.	Description	No.	Description
1	cap	35	small idler wheel
2	oblong tube	36	φ6 flat pad
3	M5x10 cross-on-head screw	37	M6x45 allen screw
4	φ5 spring pad	38	clip
5	φ5 flat pad	39	astir clip
6	end cap	40	spring
7	M8x30 allen screw	41	pin
8	rubber foot	42	half circle pad
9	leg	43	fixation block
10	M8x10 allen screw	44	M6x16 allen screw
11	bracket base (1)	45	bracket base
12	φ8 flat pad (thick 1.8)	46	pole (two hole)
13	M8 nut	47	frame
14	φ8 circlip	48	plate lock
15	φ8 plastic spring pad	49	casting
16	spring	50	screw
17	pin	51	locking handle
18	φ12 plastic pad	52	oblong tube (2)
19	M8 locknut	53	locking block
20	M8x50 screw	54	base
21	plastic hook	55	plastic pad
22	M8x16 allen screw	56	plastic cap (small)
23	frame	57	M6x10 screw
24	M8x45 allen screw	58	M6 wing nut
25	handle	59	plastic tube
26	M4x14 cross-on-head screw	60	M6x35 wing screw
27	plastic foot	61	astir bracket base(2)
28	M4 lockscrew	62	M6x12 allen screw
29	mounting bracket	63	astir bracket base(1)
30	M5 allen nut	64	backrest
31	iron chain	65	φ6 circlip
32	M5x12 cross-on-head screw	66	607 bearing
33	pin	67	roll shaft
34	M6 locknut	68	roll canister