

- | | | | | | | | |
|----|------------------------|----|-------------------|----|----------------------|----|--------------------|
| 1 | clarity shield | 21 | to and fro pole | 42 | airproof ring | 63 | washer |
| 2 | steel wire | 22 | spring | 43 | needle bearing cover | 64 | orientation axis |
| 3 | screwM4*15 | 23 | back guide bush | 44 | needle bearing K0607 | 65 | middle shell |
| 4 | screwST4*55 | 24 | moving trough | 45 | circlip for shaft8 | 66 | circlip for shaft5 |
| 5 | bracket | 25 | screw | 46 | washer | 67 | pin |
| 6 | guide wheel | 26 | shield | 47 | eccentricity axis | 68 | axis |
| 7 | fixation spindle | 27 | stator | 48 | screwM4*12 | 69 | spring |
| 8 | guide wheel axis | 28 | capacitor | 49 | spring washer 5 | 70 | knob |
| 9 | circlip for shaft pipe | 29 | screwST4*25 | 50 | eccentricity block | 71 | dust pipe |
| 10 | front shell | 30 | right housing | 51 | pin | 72 | bearing629 |
| 11 | spring | 31 | screwST4*16 | 52 | balance block | 73 | rotor |
| 12 | axis | 32 | middle cover | 53 | washer | 74 | cabl e & plug |
| 13 | rubber block | 33 | PCB | 54 | screwM4*10 | 75 | bearing607 |
| 14 | fixation block | 34 | switch draw pole | 55 | soleplate | 76 | rubber ring |
| 15 | screwM4*10.5 | 35 | switch bracket | 56 | rising hook | 77 | left housing |
| 16 | screwM4*8 | 36 | switch | 57 | gear | 78 | push button |
| 17 | circlip for shaft 16 | 37 | cable clamp | 58 | bearing HK0810 | 79 | back cover |
| 18 | washer | 38 | cable jacket | 59 | washer | 80 | screwM5*12 |
| 19 | rubber ring | 39 | brush holder | 60 | principal axis | 81 | pressboard |
| 20 | front guide bush | 40 | carbon brush | 61 | guide axis | 82 | supporting board |
| 41 | roll spring | 62 | center guide axis | 83 | screwM4*10 | | |

