


92106D2

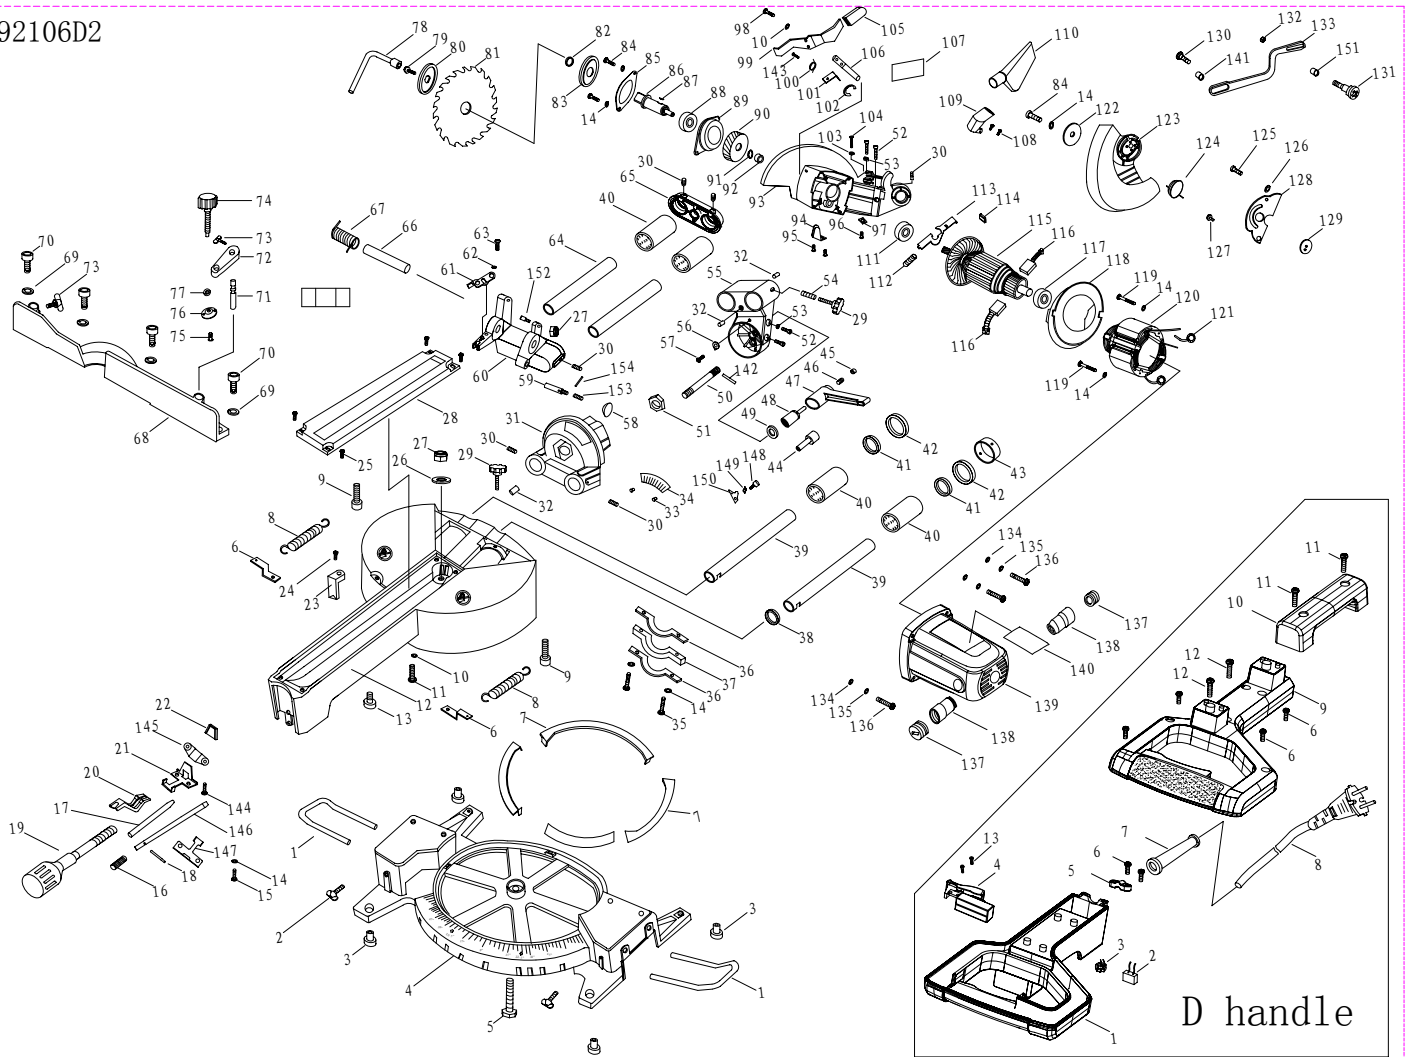

设计: 金国标

校对: 朱海报

审核: 姚建军

parts list of 92106D2

1	extension bar	78	wrench
2	Wing shape screw M6x46	79	M8x16 bolt.
3	Rubber foot	80	out flange
4	Base	81	blade
5	M8x50 screw	82	position ring for blade.
6	spring base	83	inner flange.
7	Steel plate for the rotating table	84	M5x16 cross-on-head screw
8	spring	85	bearing cover.
9	M6x12 screw	86	Output shaft
10	φ4 pad	87	4 key
11	M4x12 cross-on-head screw	88	6203 bearing
12	rotatory table	89	bearing house
13	Rubber foot	90	big gear
14	φ5 pad	91	φ17 spring clip
15	M5x10 cross-on-head screw	92	HK121610 bearing
16	small spring	93	fixed blade cover
17	locking bolt.	94	block
18	locking bolt.	95	M4x8 cross-on-head screw
19	locking handle.	96	M5x8 cross-on-head screw
20	locking release.	97	rubber block
21	steel piece for spring.	98	M4x10 cross-on-head screw
22	holder for the steel piece.	99	Self lock trigger
23	pointer	100	spring
24	M5x12 cross-on-head screw	101	spring supporter
25	M5x8 cross-on-head screw	102	φ8 Circlip
26	φ8 pad	103	screw
27	M8 locknet	104	M6x35 screw
28	kerf board	105	Trigger cap
29	locking screw for sliding bar	106	Self lock connection rod
30	M6x8 screw	107	label 1
31	engage of the table	108	M4x10 cross-on-head screw
32	Rubber baffle	109	dust outlet
33	Rivet 2x4	110	dust bag
34	Scale	111	6202 bearing
35	M5x35 cross-on-head screw	112	spring
36	sliding bar supporter	113	bolt for self lock.
37	plastic supporter	114	cover for self lock.
38	rubber ring	115	rotor
39	guiding bar	116	carbon brush.
40	linear bearing	117	6000 bearing
41	ring	118	Ring.
42	Press ring	119	ST4. 8x70 screw
43	locking ring for guiding bar.	120	stator
44	screw for locking supporter	121	Ring.
45	bolt cover	122	pad for movable blade guard.
46	locking spring	123	movable guard
47	back handle	124	Spring
48	nut	125	M6x8 cross-on-head screw
49	φ10 pad	126	φ6 nut
50	M10x95 bolt	127	screw
51	M10 locknut	128	big guard plate
52	M6x25 screw	129	block plate
53	M6 nut	130	Screw for connection rod 1
54	spring	131	Screw for connection rod 2
55	supporter parts	132	M6 locknut
56	bevel angle pointer.	133	connection rod
57	M4x8 cross-on-head screw	134	φ6 flat pad
58	locking cap	135	φ6 spring pad
59	self-locking bolt for miter saw head	136	M6x35 cross-on-head screw
60	engage of the supporter	137	carbon brush cap
61	adjusting steel pad	138	brush holder
62	φ6 pad	139	motor housing
63	screw	140	label 2
64	up sliding bar	141	connect cover 1
65	back cap	142	φ6 hollow pin
66	supporting bolt for saw head.	143	M3x8 cross-on-head screw
67	spring	144	M5x12 cross-on-head screw
68	fence	145	support base
69	φ6 spring pad	146	locking bolt.
70	M6x30 screw	147	locking plate
71		148	cross nonstandard screw
72		149	spring
73		150	Angle localizer
74	work clamp	151	connect cover 2
75		152	nonstandard screw
76		153	locking spring
77		154	φ3 hollow pin