


Exploded view for 96-850

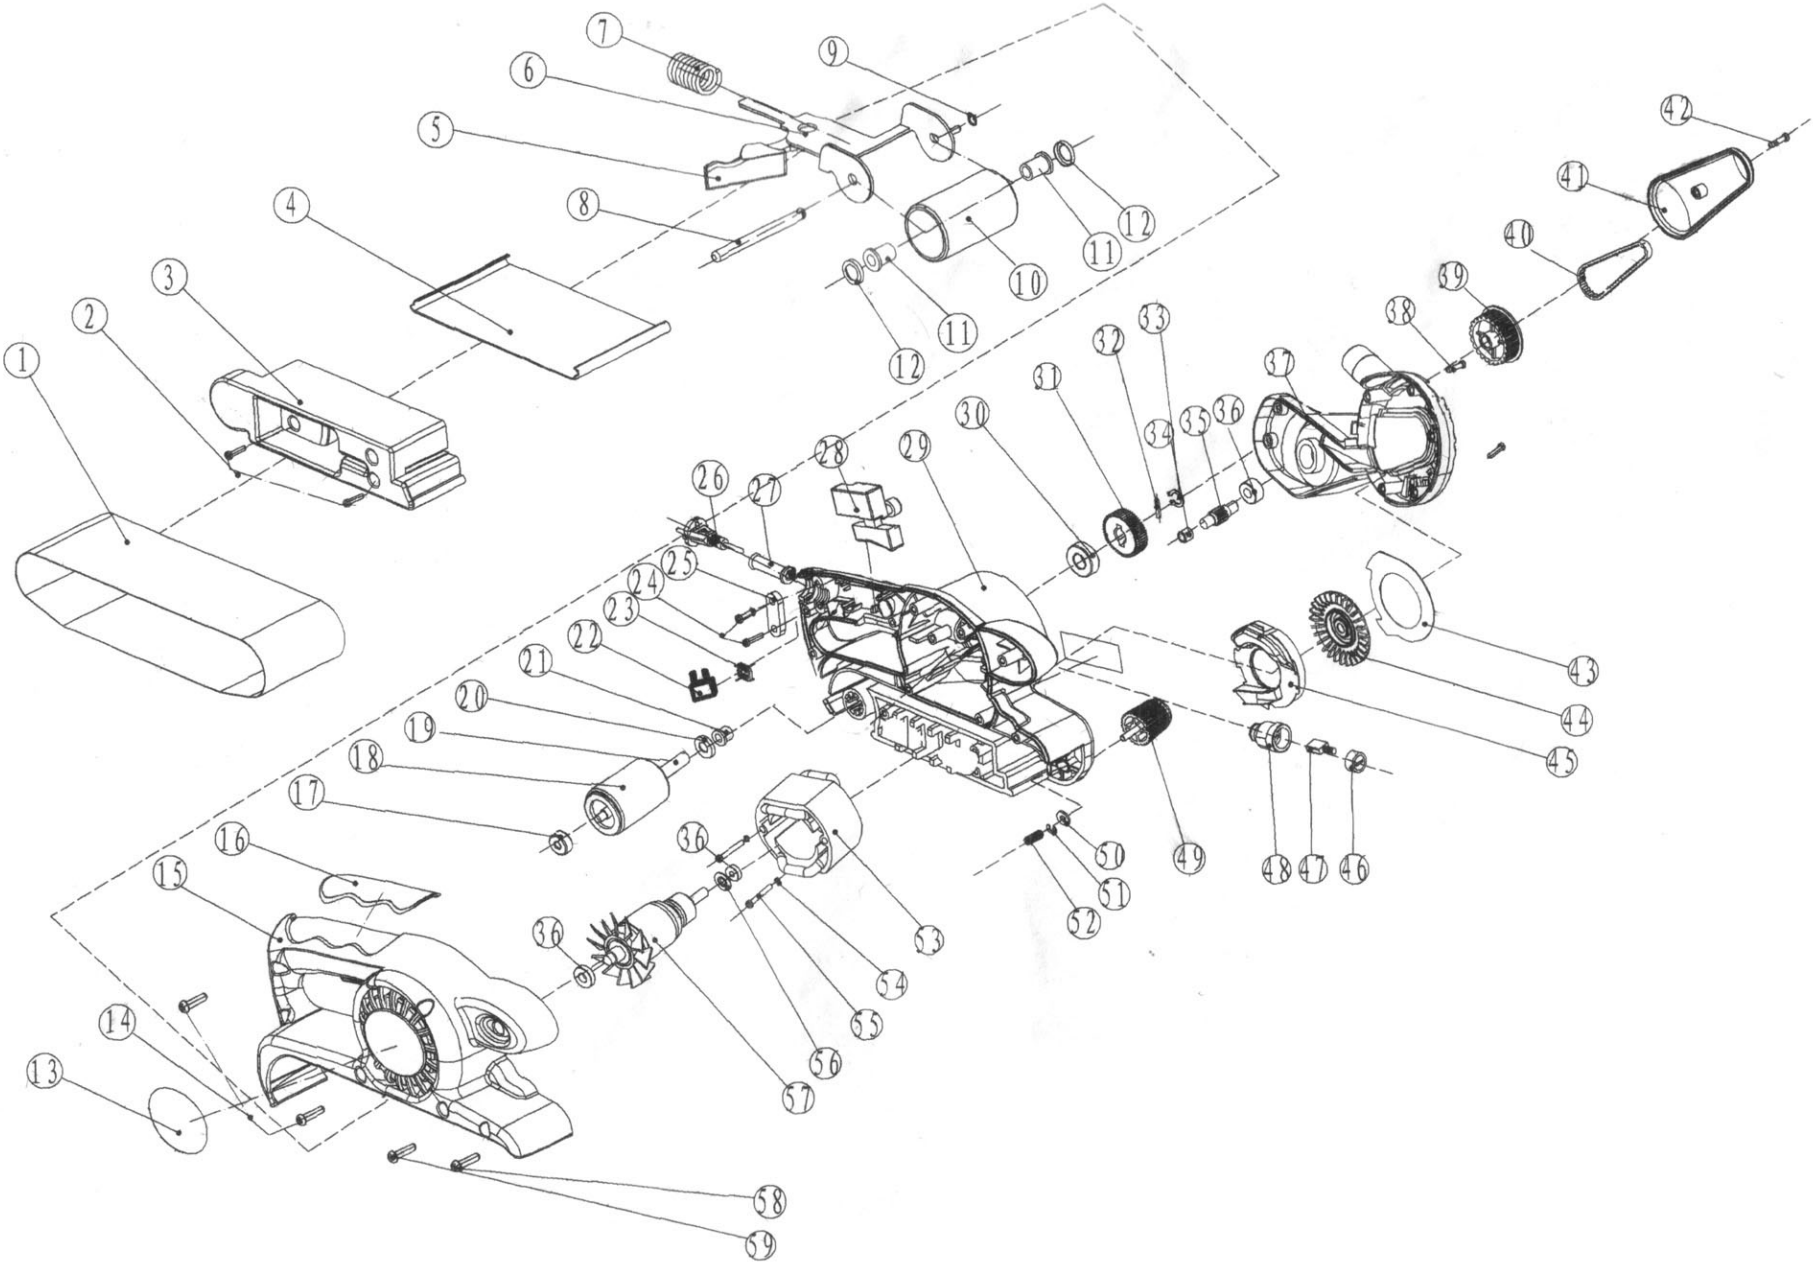

96-850 Spare Parts List

Item no.	Part name and spec	Item no.	Part name and spec
1	Sanding belts	34	Oil bearing0509
2	Screw ST4.8×20	35	Shaft gear
3	Front-cover	36	Bearing608
4	Bottom plate	37	Dust bag
5	front-wheel frame	38	Screw ST4.2X22
6	front-wheel frame	39	Small-belt-wheel
7	spring	40	belt
8	front-wheel drive axis	41	Belt cover
9	Retaining10	42	Screw ST4.8×14
10	Front-wheel	43	Cover board
11	Needle bearing	44	Small-belt-wheel
12	Ring washer	45	Fan guide
13	Subsidiary nameplate	46	Brush holder cover
14	Screw ST4.8×20	47	Carbon-brush
15	Right housing	48	Carbon-brush frame
16	Soft grip	49	Adjust-nut
17	Bearing626	50	close over ϕ 8X ϕ 12
18	Ring washer	51	Retaining7
19	Rear wheel axis	52	Adjust spring
20	Ring washer	53	Stator
21	Oil bearing	54	close over ϕ 5
22	capacitor	55	Screw ST4.8×50
23	inductance	56	Insulate washer
24	Screw ST3.8×14	57	Rotor
25	Cable-pressure	58	Screw ST4.8×35
26	Cable plug	59	Screw ST4.2×50
27	Cable cover	60	
28	Switch	61	
29	Left housing	62	
30	Bearing6000	63	
31	Big gear	64	
32	Column melt ϕ 3	65	
33	Retaining10	66	