


Exploded view for 96-712

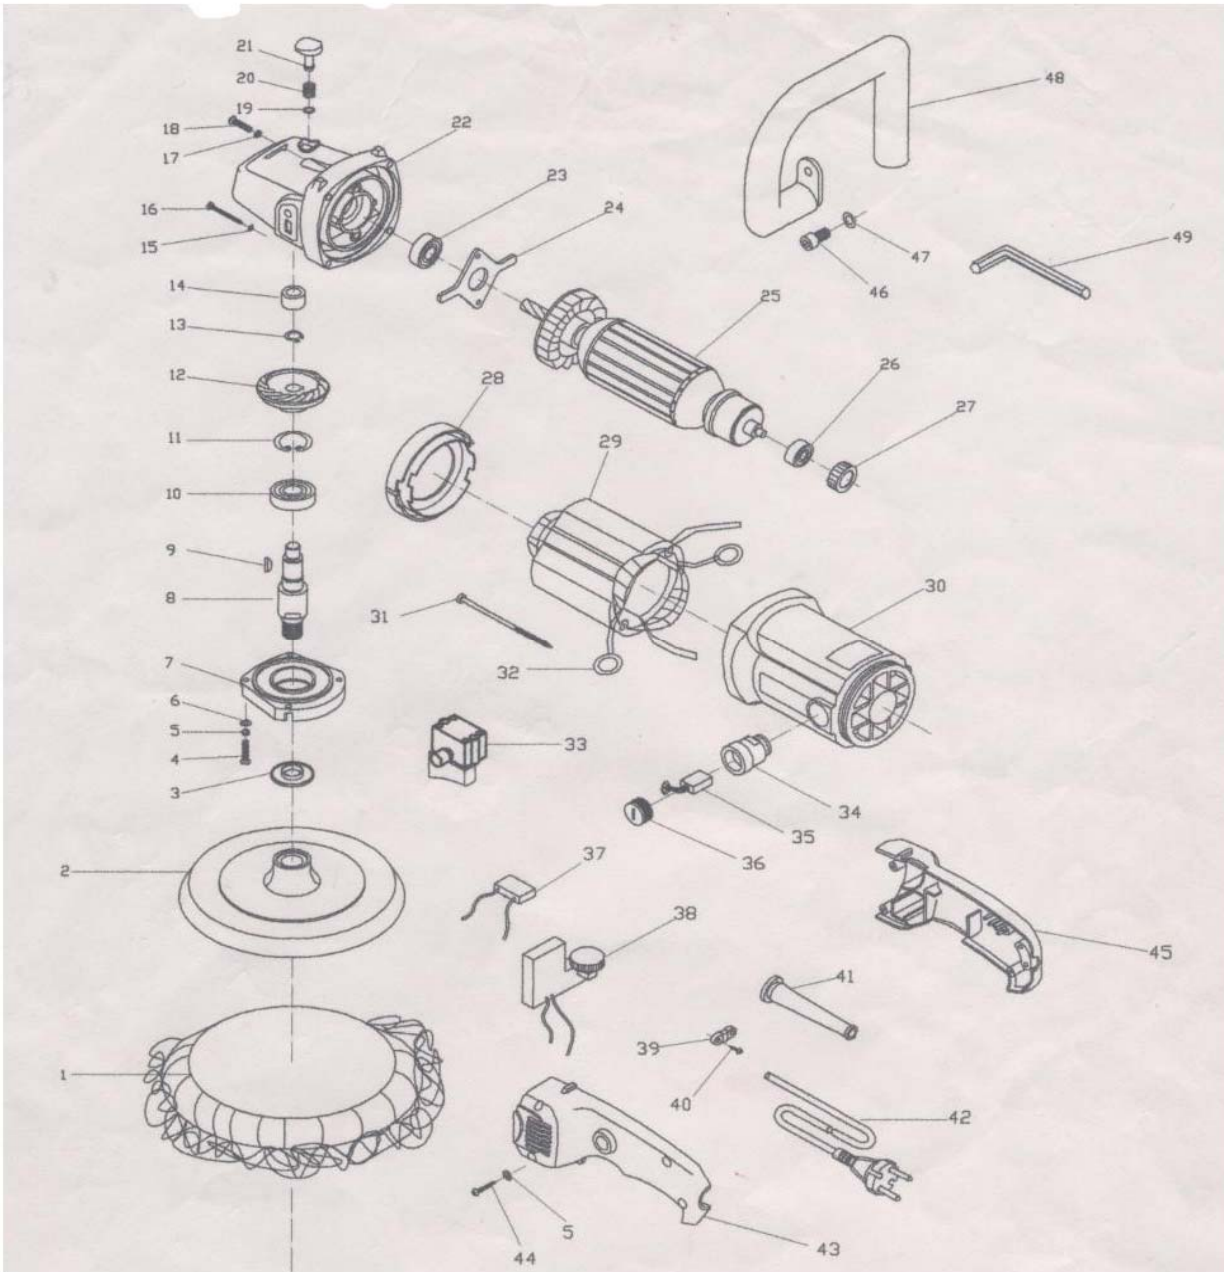

SPARE PARTS LIST

SPARE PARTS LIST			
NO.	DESCRIPTION	NO.	DESCRIPTION
1	WOOL WASHER	26	BEARING
2	POLISHER DISC	27	BEARING BUSH
3	DUSTPROOF GASKET	28	WIND GUARD
4	SCREW	29	STATOR
5	SPRING WASHER	30	ENCLOSURE
6	WASHER	31	SCREW
7	FRONT COVER	32	PULL SPRING
8	SPINDLE	33	SWITCH
9	KEY	34	BRUSH HOLDER
10	BEARING	35	CARBON BRUSH
11	CIRCLIP	36	BRUSH CAP
12	GIG GEAR	37	CAPACITOR
13	CIRCLIP	38	SPEED ADJUSTOR
14	SELF-OIL BUSH	39	CORD CLAMP
15	FLAT WASHER	40	SCREW
16	SCREW	41	CORD BUSH
17	SPRING WASHER	42	CORD & PLUG
18	SCREW	43	LEFT BACK HOUSING
19	OPEN CIRCLIP	44	SCREW
20	LOCK SPRING	45	RIGHT BACK HOUSING
21	LOCK PIN	46	BOLT
22	HEAD SHELL	47	FLAT WASHER
23	BEARING	48	HANDLE
24	BEARIGN COVER	49	INNER HEX SPANNER
25	ROTOR		