
Spare parts list

Position	Description	No.
1	Screw left	408900
2	Drill chuck	408901
8	Gear	408902
18	Side handle	408903
23	Rotor	408904
26	Stator	408905
29	Switch	408906
35	Carbon brush holder	408907
36	Carbon brush set	408908

Exploded view

