
Spare parts list

No.	Description	Position
406847	Outer flange	1
406846	Inner flange	3
400970	Clamping set for guard	4 till 6
400971	Spring ring	8
401250	Gear wheel	16
401271	Spindellock complete	19, 22, 23
401272	Side handgrip	25
401251	Pinion gear	27
806000	Bearing 6000 ZZ	28
401273	Rotor	30
800607	Bearing 607 ZZ	32
401274	Stator	36
401281	Rod for switch	39, 40
401282	Carbon brush set	43
406955	Switch	46
406814	Cam wrench	54

Exploded view

